

## To bind books with Neschen Book Protection Films




**Products:** all surface protection films


**Tools:** scissors, burnishing bone, squeegee or a soft cloth

Processing Instructions: Book protection films


1) Select the width of the book protection film so that the film overlaps approx. 2 cm top and bottom.

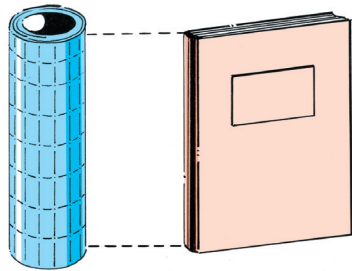


2) Cut the film so that it overlaps on all four sides by approx. 2-3 cm when the book is open.

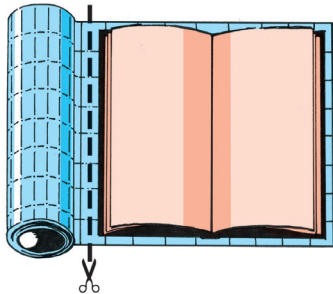


3) Then peel back approx. 10 cm of the backing paper or backing film (filmolux® soft) and align the film on three sides, position on the book cover and press the edge of the film down.

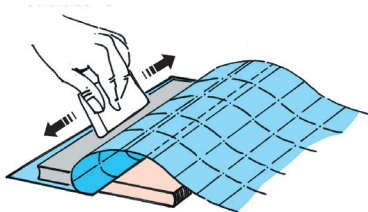


4) Slowly peel off the backing paper / film from under the protection film and press the film down towards the edges using the book squeegee.

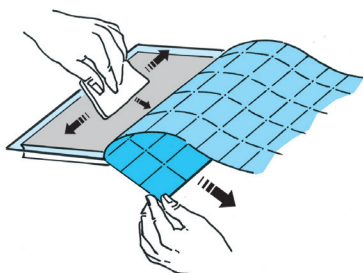


5) Press the film with the burnishing bone gently into the book fold and then rub onto the book spine.

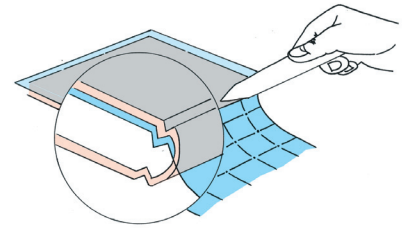


6) Turn the entire book over and continue in the same way on the back.

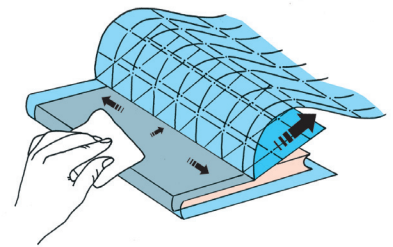


7) Cut the film overlaps at all corners diagonally and make wedge-shaped cuts at each book joint.

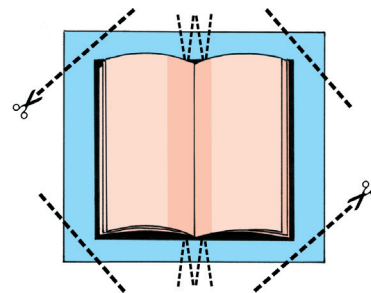

8) Fold the film overlaps over the inside of the book cover and press down.

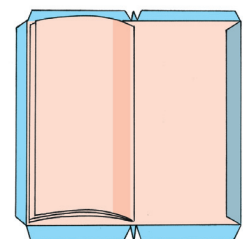

9) Work the film overlaps on the book into the back with the burnishing bone cut them off on paper-backs.

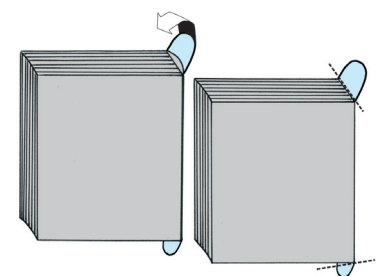

**For orders, sample requests, queries or suggestions please contact:**

Neschen AG | Hans-Neschen-Str. 1 | D-31675 Bückeberg

Tel.: +49 (0) 57 22-20 70 | Fax: +49 (0) 57 22-20 71 59 | E-Mail: info@neschen.de | www.neschen.com